


Date: Tuesday, December 8, 2009
To: All Lumenera Partners
From: James Mihaychuk, Product Manager



Re: Network Camera Product Modification Notice – UPDATED
Improved Lens Mount
Product News #09-Sec-03

Effective December 2009, Lumenera will begin phasing in network cameras with an improved lens mount.

The change will affect all Le-series and Li-series network cameras except the Le259 and Le11059. The same lens mount will be used on cameras with the true day-night feature with moving near-infrared filter shuttle.

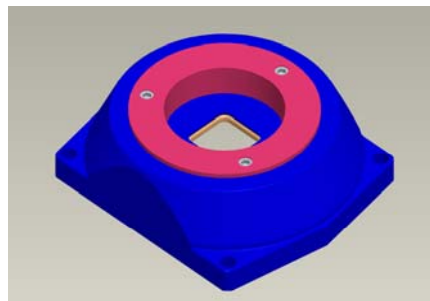

Description

The new camera lens mount is fabricated from die cast aluminum. The lens mount is black anodized (Le045 and Li series) or painted with beige powder coat (Le series) on non-mating exterior surfaces.

As with the earlier design, the back focal distance is set at the factory to be compatible with CS-mount lenses or a C-mount lens combined with a 5mm C-to-CS mount adapter ring (Lumenera part Lu901).

Features

- Easy to use with a wide assortment of lenses
- Accepts both C-mount and CS-mount lens with a 5 mm C-to-CS mount adapter ring
- Allen (hex) key adjustment of set screws will allow a user to set a custom back focal distance

Ordering information

There will be no change to ordering information for cameras. Customers using C-mount lenses should continue to order the Lu901 C-to-CS mount adapter.

Obsolescence

The previous lens mount design will be discontinued. Please contact your Sales representative for any custom or legacy requirements.

Allen Key Information

Adjustments to set the custom back focal distance can be made using a McMaster Carr # 5497A23, Comfort Grip Ball Driver Standard Length, 1/16" Hex, 2-1/2" Blade Length, or any other equivalent model.

Repair Policy

Lumenera reserves the right to substitute the new part as required on cameras returned to the factory for repairs. This policy may be subject to other customer-specific service level agreements.

Updated Datasheets

Updated datasheets are available on the Lumenera website at:

<http://www.lumenera.com/products/surveillance-cameras/index.php>.

Contact Information

Should you have any questions or concerns, please contact your Sales representative, or Tenaha Moxon, Senior Sales Coordinator, at tenaha.moxon@lumenera.com / +1-613-736-4077 x 180 for more information.